


CONNECTING THE EQUIPMENT

This Quick Start Guide shows two connection setups, which show various ways of setting up your Pace TDC775D with your other equipment. The solid lines show recommended connections, while the dashed lines show optional or alternate connections.

Choose the setup that closest matches your available equipment.

Setup 1: TDC775D with HDTV and VCR

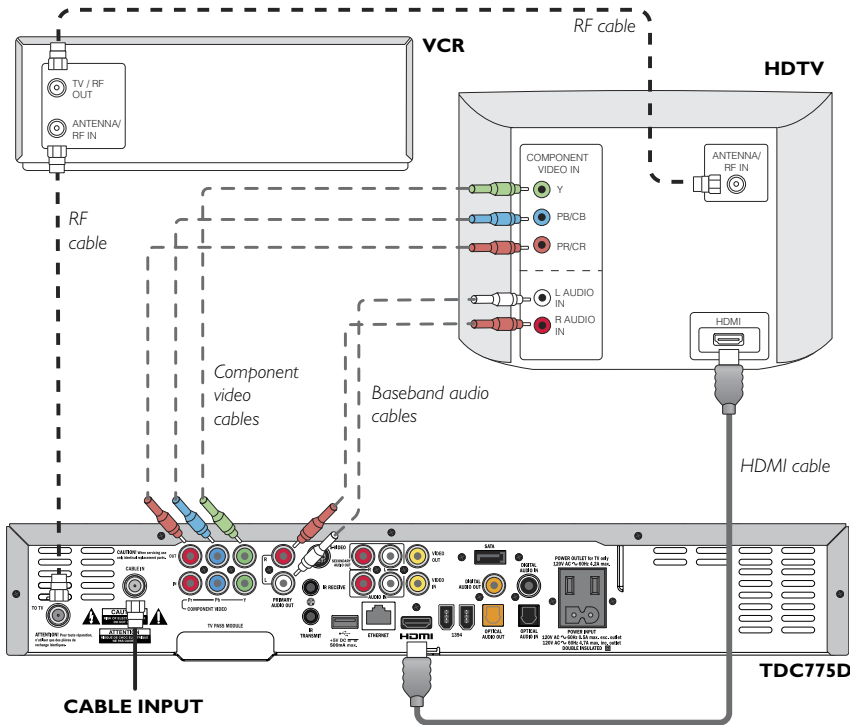

In Setup 1, connect your set-top to your TV via **either** an HDMI connector, **or** via component video connectors.

Connect the baseband audio cables to your TV as shown.


The RF connection and VCR are optional.

WARNINGS

Do not connect your set-top (or any other equipment such as a TV or VCR) to the AC power supply until you have properly connected all the other cables. Disconnect your set-top from the AC power supply before you disconnect any other equipment from its rear panel.

The only way to disconnect your set-top from the AC power supply is to remove the AC power cord (or switch the wall socket-outlet switch, if present, to its OFF position). Your set-top must therefore be installed near to the AC power socket-outlet, which should be easily accessible.

Setup 2: TDC775D with home theater receiver (or audio decoder), HDTV and VCR

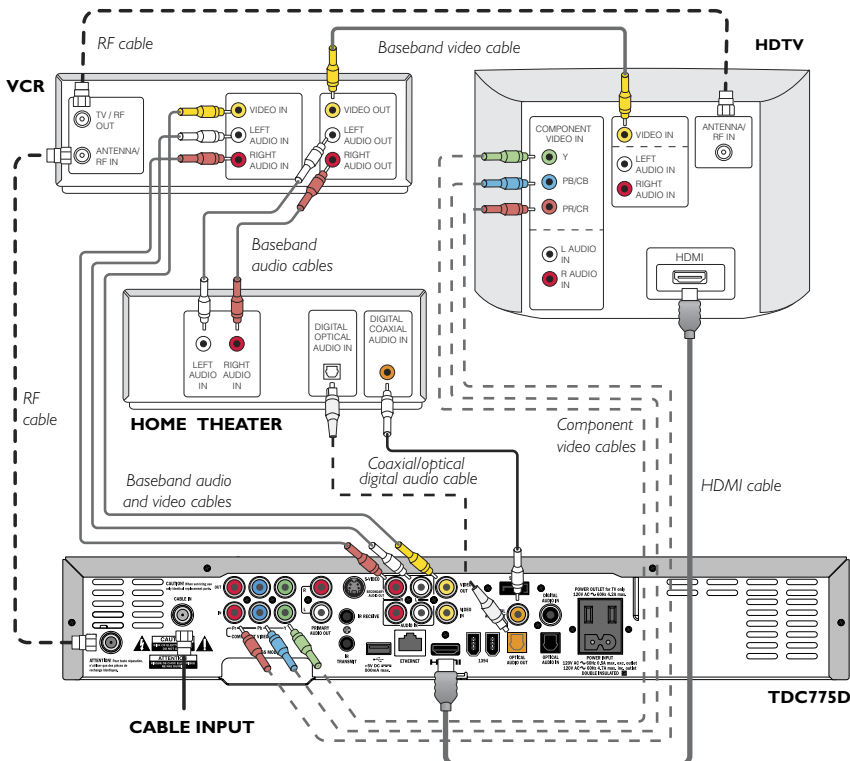


In Setup 2, connect your set-top to your TV via **either** an HDMI connector, **or** via component video connectors.

Connect your set-top to your home theater receiver (or audio decoder) via **either** an optical digital audio cable **or** a coaxial audio cable.

Connect your VCR to your other equipment via baseband audio and video cables as shown.

The RF connection is optional.

The POWER OUTLET plug is designed only for connection to the AC power cord for a TV. The maximum power it can supply is 500 watts. Do not connect any equipment that uses more than 500 watts, or any non-TV equipment such as a toaster or hair drier.

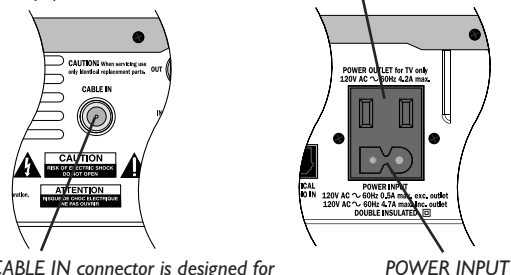


The CABLE IN connector is designed for connection to a cable network only. You must not connect any other equipment, such as a VCR, to this input.

POWER INPUT

SAFETY & VENTILATION INFORMATION

- Do not cover or block the slots and ventilation openings on your set-top. Never stand your set-top on soft furnishings or carpets.
- Do not install your set-top near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- To allow sufficient ventilation, maintain a minimum distance of 3 inches around your set-top.
- Do not place your set-top in an unventilated cabinet or on top of a unit which emits heat (e.g. a TV).
- Do not allow anything to drip or splash onto your set-top. Do not place anything on top of your set-top.

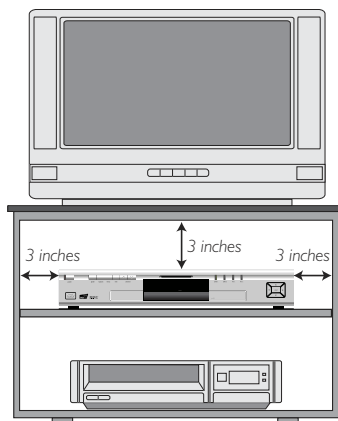


Connecting to the Power Supply

- Before you connect your set-top to a wall outlet, connect the polarized socket on the power cord into the plug labeled "POWER INPUT" on your set-top's rear panel.
- Connect the polarized plugs on the power cords from your set-top, VCR and any other equipment into AC wall outlets. If these outlets have switches, switch them to ON.

You should also refer to Important Safety Instructions in your Pace TDC775D Operator's Manual.

To turn on your set-top, press the power button. The light beside the button lightens blue.

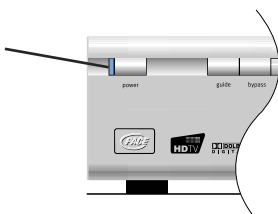

TURNING YOUR SET-TOP ON AND OFF

To turn your set-top on, press the button labeled **power** on the front panel. Do not unplug your set-top at the wall AC outlet (or do not switch it off there, if the outlet has a switch).

To turn your set-top on or off at any time, press the **power** button on its front panel or the **POWER** button on the remote control (making sure the remote control is set to control the set-top).








SETTING UP YOUR TDC775D FOR YOUR TV

You should make the correct HDTV settings to ensure your set-top is compatible with your HDTV or TV.

1. Make sure that your set-top is switched on.
2. Press and hold down the **power** button on your set-top, then within 1 second, press the **menu** button.

The front panel displays "ASPT" as shown right. You should also see the HD Power Menu, shown in the illustration below, on your TV screen. If you cannot see this menu, see your Operator's Manual for instructions on how to use the front panel display to make HDTV settings. (Once you have made the correct settings, the HD Power menus will display.)

Use the ◀ and ▶ buttons to select an item to change or to return to the previous menu. Use the ▲ and ▼ buttons to view and highlight the settings and press select to choose the setting you want. See the illustration below or for more information see your Operator's Manual.

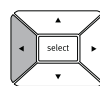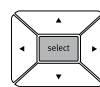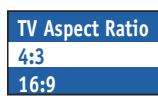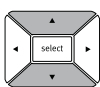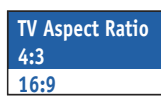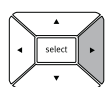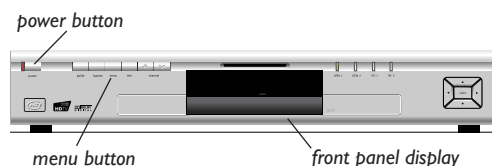

The HDTV settings you can change are:

- TV Aspect Ratio - choose your TV screen's width-to-height ratio, or shape;
- TV Display Capability - choose the screen resolution(s) your TV is capable of displaying (1080i, 720p, 480p and/or 480i);
- Auto Pillarbox - choose On or Off;
- Closed Captions - choose On or Off and change the appearance;
- Front Panel Settings - choose Low, Standard or High;

You can also reset the HDTV settings to the factory defaults.

3. Once you have finished making changes, to remove the HD Power Menu, and return to normal viewing, press the **power** button.

FURTHER INFORMATION

For more information about your Pace TDC775D, including a "Solving Problems" section, please see your Pace TDC775D Operator's Manual.